



|   |         |
|---|---------|
| <b>Comments and Suggestions</b> .....                               | Intro-1 |
| <b>Introduction to Heatizon</b> .....                               | Intro-2 |
| <b>System Description</b> .....                                     | Intro-4 |
| <b>Design Information</b> .....                                     | Intro-5 |
| <b>Warnings</b> .....   | Intro-6 |
| <b>Element Selection and Application Requirements</b> .....         | Intro-7 |
| <b>Warranty</b> .....   | Intro-8 |
| <br>  |         |
| <b>Section 1: Rough-in</b> .....                                    | 1-1     |
| Determine Back Plate Location .....                                 | 1-1     |
| Install the Back Plate.....   | 1-2     |
| Plan the Cold Lead.....   | 1-3     |
| Install the Cold Lead.....  | 1-4     |
| Cold Lead to Element Connection .....                               | 1-6     |
| Install Thermostat Wire .....                                       | 1-7     |
| Install Electrical Service .....                                    | 1-7     |
| Jumpering.....  | 1-8     |
| <br>  |         |
| <b>Section 2: Heating Element Installation</b> .....                | 2-1     |
| Tuff Cable General Instructions .....                               | 2-2     |
| Tuff Cable Specific Application Guide.....                          | 2-3     |
| Tuff Cable in New Pour Concrete .....                               | 2-4     |
| A Few Concrete Suggestions.....                                     | 2-6     |
| Tuff Cable Jumpers .....  | 2-8     |
| Tuff Cable in Mortar Bed or Lightweight Concrete .....              | 2-10    |
| Tuff Cable in Sand Bed Under Asphalt, Pavers, or Concrete .....     | 2-13    |
| Tuff Cable Retrofit Installation .....                              | 2-16    |
| Tuff Cable in Heatsink Kit on Roof or Deck.....                     | 2-19    |
| Roof Information for Contractors .....                              | 2-20    |
| ZMesh General Instructions .....                                    | 2-24    |
| ZMesh Repairs and Tips .....  | 2-25    |
| Planning ZMesh Layout.....  | 2-26    |
| ZMesh Specific Application Guide .....                              | 2-27    |
| ZMesh Interior Installation .....                                   | 2-28    |
| ZMesh on Deck Installation .....                                    | 2-30    |
| ZMesh Retrofit Staple Up.....                                       | 2-31    |
| ZMesh Roof Deicing Installation.....                                | 2-32    |
| Roof Information for Contractors .....                              | 2-34    |
| <br>  |         |
| <b>Section 3: Transformer Installation</b> .....                    | 3-1     |
| <br>  |         |
| <b>Section 4: Control Unit Installation—All Control Units</b> ..... | 4-1     |
| CBX6 and CBX23 Additional Steps .....                               | 4-3     |
| CBX7 Additional Steps .....   | 4-5     |
| <br>  |         |
| <b>Section 5: Activation Device</b> .....                           | 5-1     |

# TABLE OF CONTENTS

|  |      |
|--|------|
| <b>Start Up Procedures</b> .....                             | 6-1  |
| CBX6 and CBX23.....  | 6-2  |
| CBX7 .....   | 6-7  |
| <b>Making the Connection (How to Make Connections)</b> ..... | 7-1  |
| Cold Lead to Cold Lead.....                                  | 7-1  |
| Tuff Cable to Cold Lead .....                                | 7-2  |
| Tuff Cable to Tuff Cable .....                               | 7-3  |
| ZMesh to Cold Lead and Transition Plate.....                 | 7-4  |
| ZMesh to ZMesh .....   | 7-5  |
| <b>System Operating Tables</b> .....                         | 8-1  |
| 12" ZMesh .....  | 8-2  |
| 9" ZMesh .....   | 8-5  |
| Tuff Cable.....  | 8-8  |
| Other Useful Information .....                               | 8-12 |
| <b>Trouble Shooting Procedures</b> .....                     | 9-1  |
| CBX6 and CBX23.....  | 9-2  |
| CBX7 .....   | 9-6  |
| Locating a Short in ZMesh Element .....                      | 9-7  |
| <b>After Element Installation Test</b> .....                 | 10-1 |
| <b>Comments and Suggestions</b> .....                        | 10-5 |

Heatizon Systems  
4137 South 500 West  
Murray, UT 84123

801-293-1232 Phone  
801-293-3077 Fax  
Www.heatizon.com