

CG SERIES FITTINGS INSTALLATION

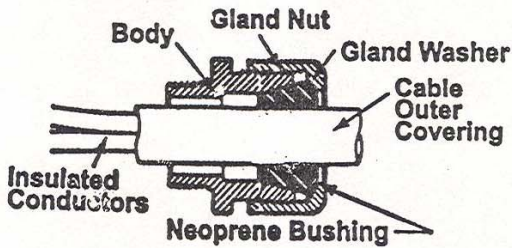


FIGURE 1

1. Install body securely in conduit hub or fasten in knockout with locknut.
2. Slide gland nut, gland washer, and bushing over cable in that order.
3. Install cable through body far enough to allow wire connections. Figure 1. If cable does not pass through body, remove sufficient outer covering of cable to pass conductors through the connector body.
4. Install bushing into body, slide gland washer against bushing and thread gland nut onto body. Tighten gland nut to cause bushing to grip cable firmly so liquidtight seal is formed.

COOPER INDUSTRIES, INC.
CROUSE-HINDS DIVISION
PO BOX 4999
SYRACUSE, NY 13221 • USA

INSTALACIÓN DE CONECTOR SERIE CG

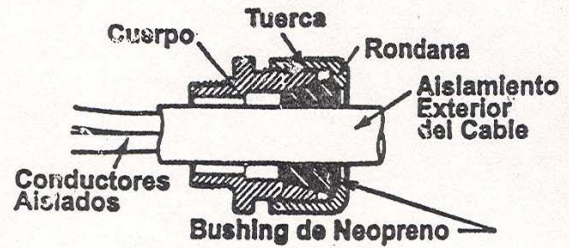


FIGURA 2

1. Instale el cuerpo firmemente en la entrada de conduit de la caja registro o en la entrada del gabinete con una contratuerca.
2. Deslice la tuerca, rondana y bushing de neopreno en el cable, siguiendo este orden.
3. Pase el cable a través del cuerpo, lo suficientemente necesario para realizar las conexiones, figura 2; si el cable no pasa lo suficiente a través del cuerpo, retire parte del aislamiento exterior del cable.
4. Coloque el bushing dentro del cuerpo, deslice la rondana contra el bushing y rosque la tuerca en el cuerpo. Apriete la tuerca para provocar que el bushing estrangule el cable firmemente y obtener así el sello a prueba de líquidos.

CGB192

IF 513
REVISION 1
REVISED 09/01
SUPERCEDES 04/91